


ARM REST KIT V2

ASSEMBLY DIAGRAM

IMPORTANT NOTICE :

CLAMP BOLTS FROM THE AERO BOLT-ON MUST BE REPLACED WITH T25 M5 X 16mm BOLTS SUPPLIED.

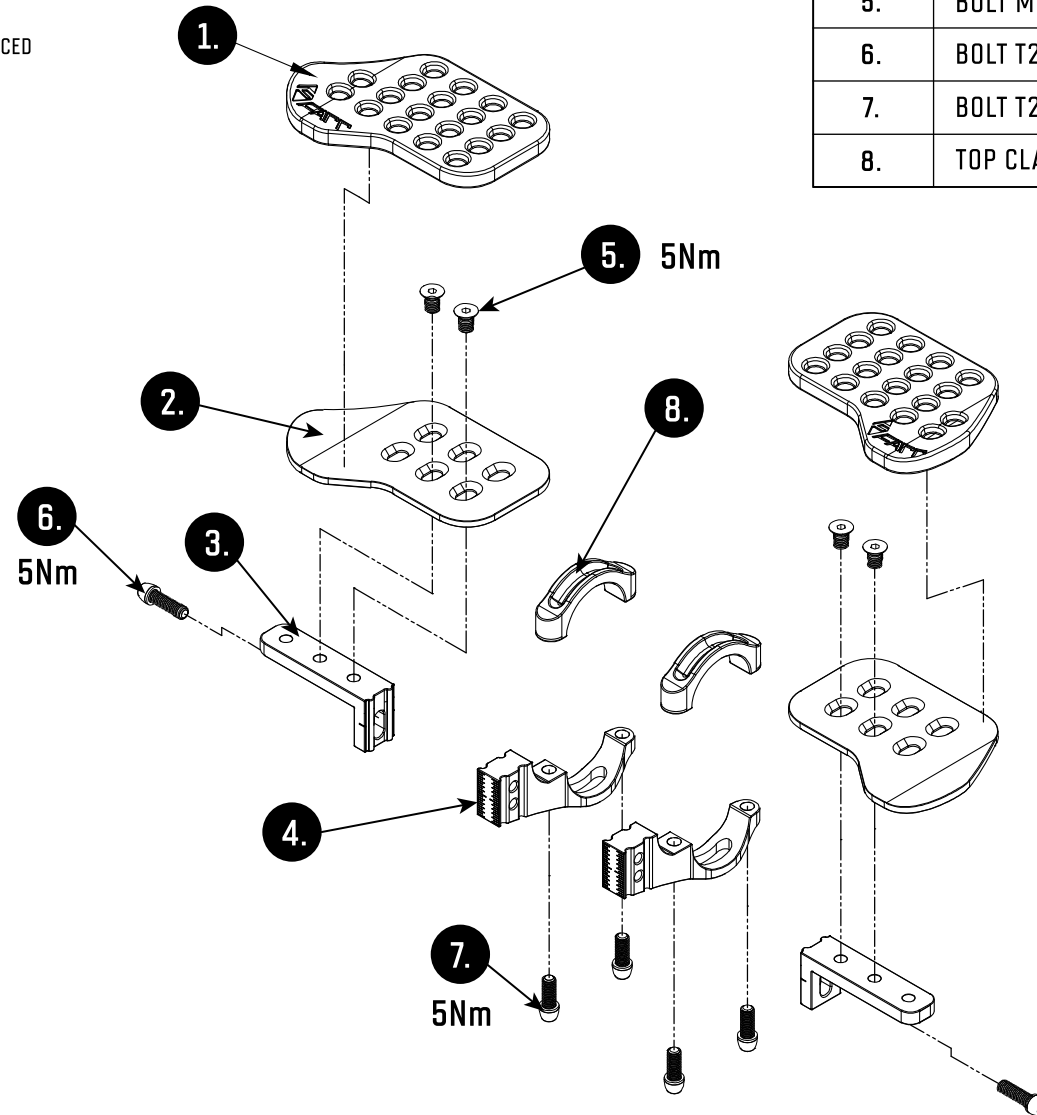

ITEM	DESCRIPTION	MATERIAL	QTY
1.	ARM REST PAD	EVA	2
2.	ARM REST CUP	AL6061	2
3.	L-BRACKET	AL6061	2
4.	LOWER CLAMPS	AL6061	2
5.	BOLT M5 x 9mm	STEEL	4
6.	BOLT T25 M5 x 18mm	STEEL	2
7.	BOLT T25 M5 x 16mm	STEEL	4
8.	TOP CLAMP	AL6061	2